

**HPRT**

# **HPRT Utility Tool for POS Instruction**

Rev.1.0



HPRT Utility Tool is applicable to the following operating system:


- Microsoft Windows 10 (32 bit/64 bit)
- Microsoft Windows 8 (32 bit/64 bit)
- Microsoft Windows 7 SPI (32 bit/64 bit)
- Microsoft Windows Vista SP2 (32 bit/64 bit)
- Microsoft Windows XP Professional SP3 (32 bit)
- Microsoft Windows Server 2012(64 bit)
- Microsoft Windows Server 2008 R2
- Microsoft Windows Server 2008 SP2(32 bit/64 bit)
- Microsoft Windows Server 2003 R2 SP2(32 bit/64 bit)

<b>Driver version</b>	<b>V 1.2.3.17</b>
-----------------------	-------------------


## 1. Installation of HPRT Utility Tool

1. Open the installation package.


2. Choose "English" and click "OK".

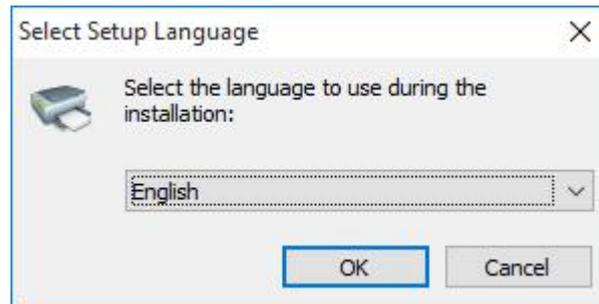


3. Click "Next".

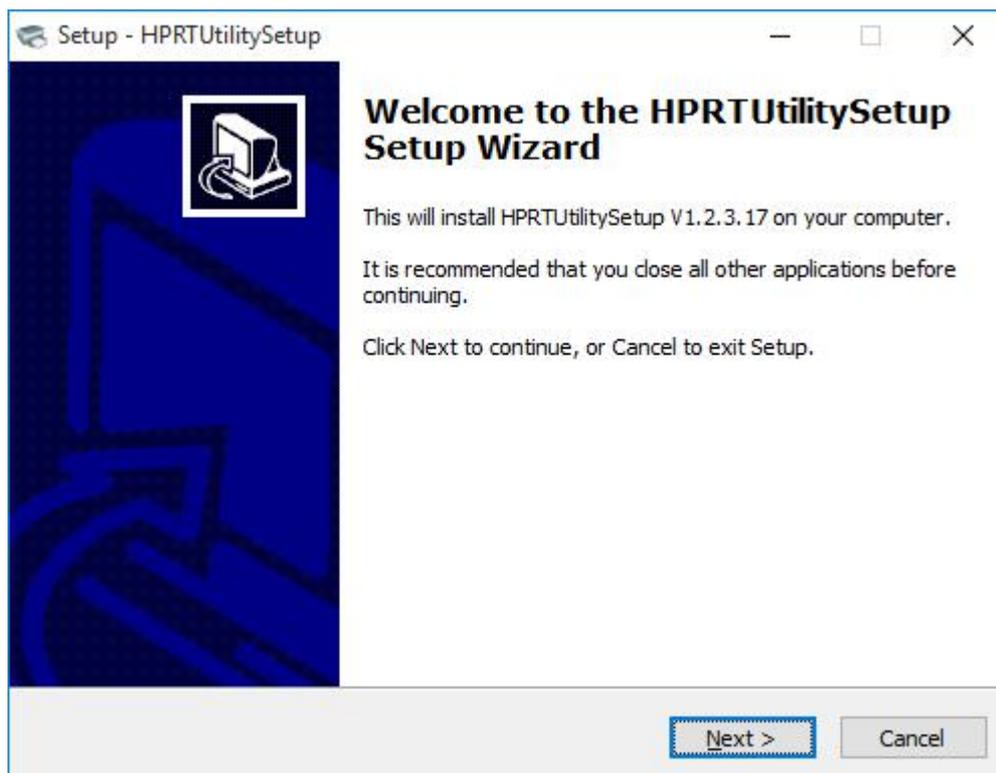


4. Select destination location to install the HPRT Utility Tool. Click “Next”.

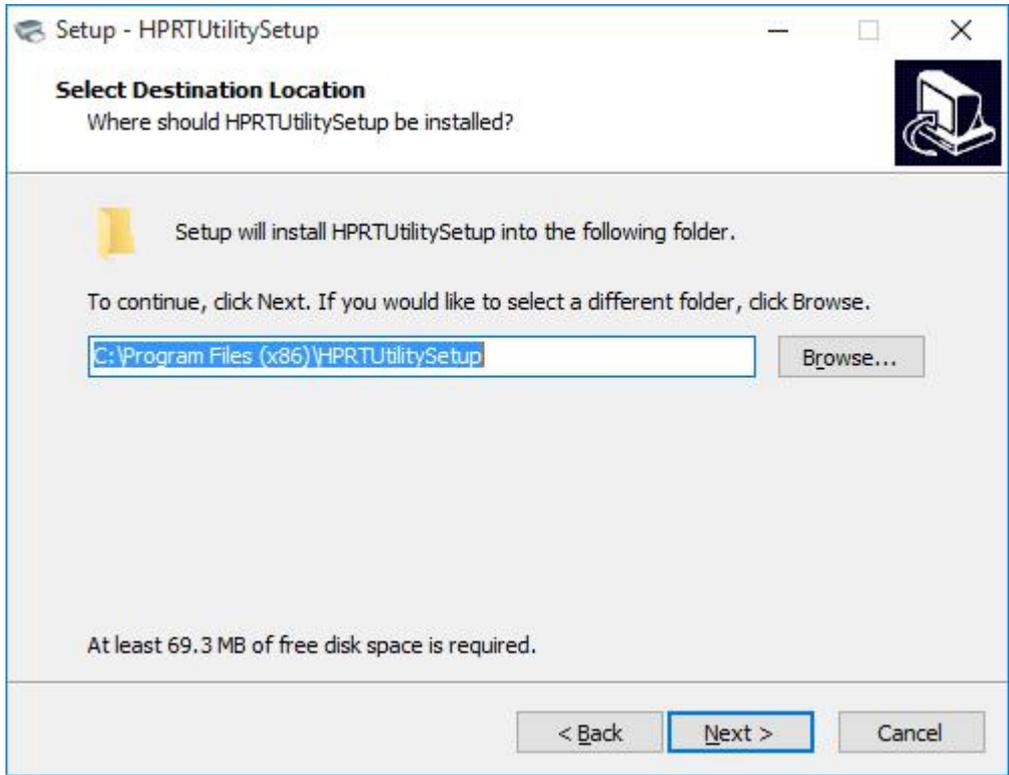


5. Select start menu folder. Click “Next”.

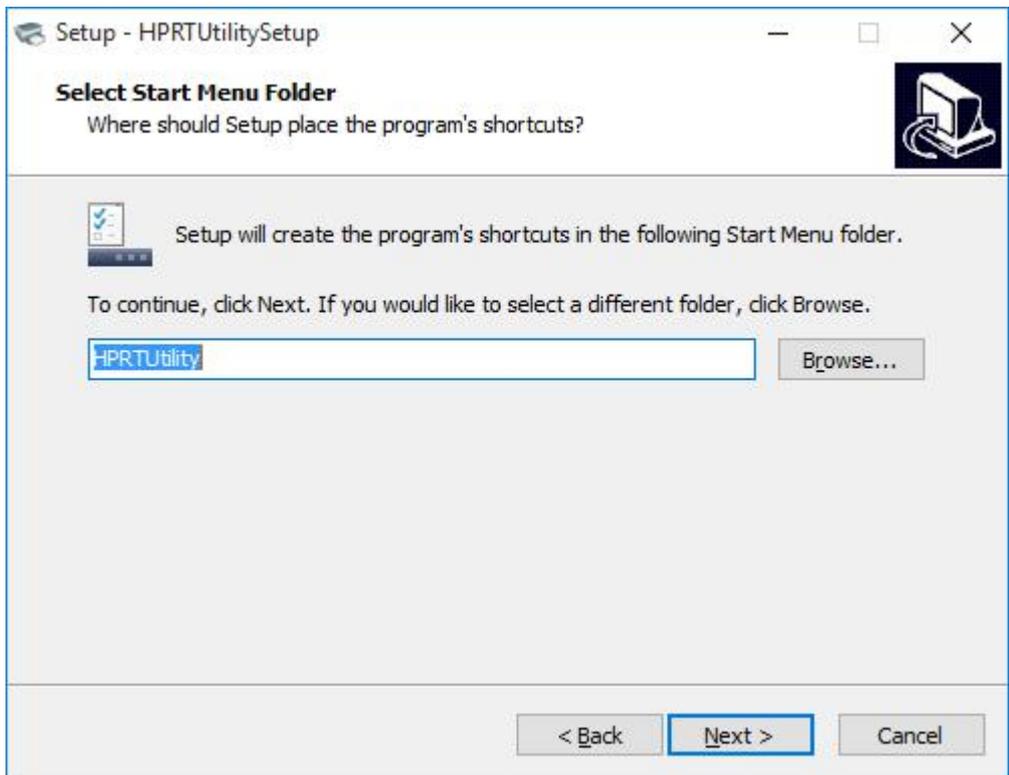

6. Click "Install".

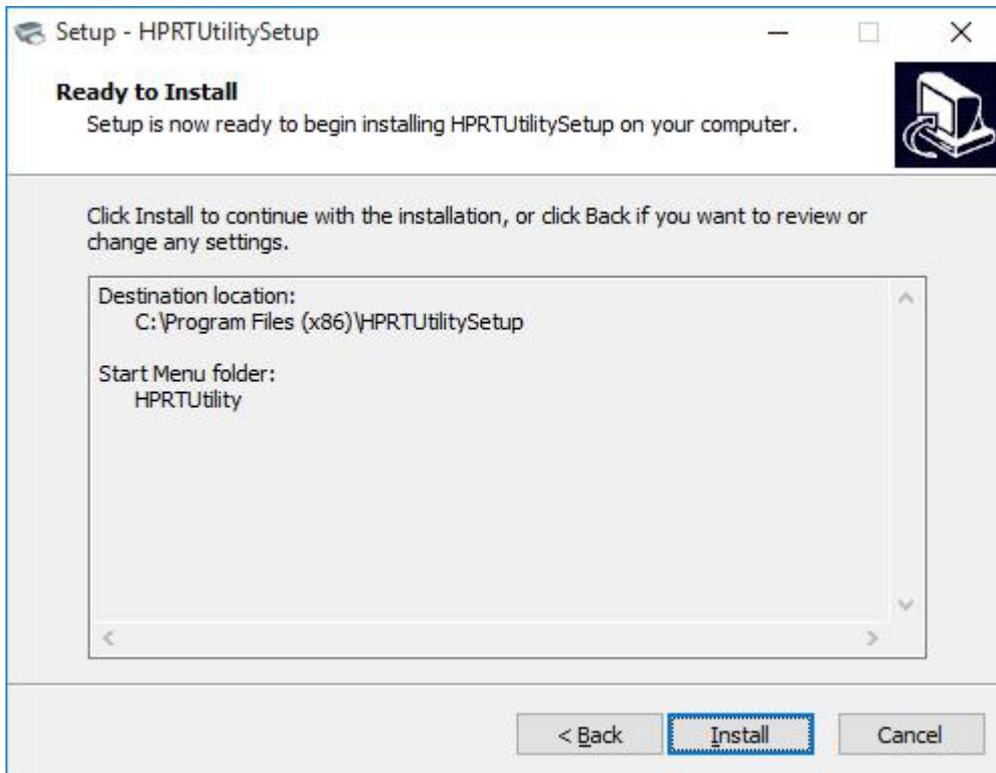

7. Click "Finish". HPRT Utility Tool installed successfully.

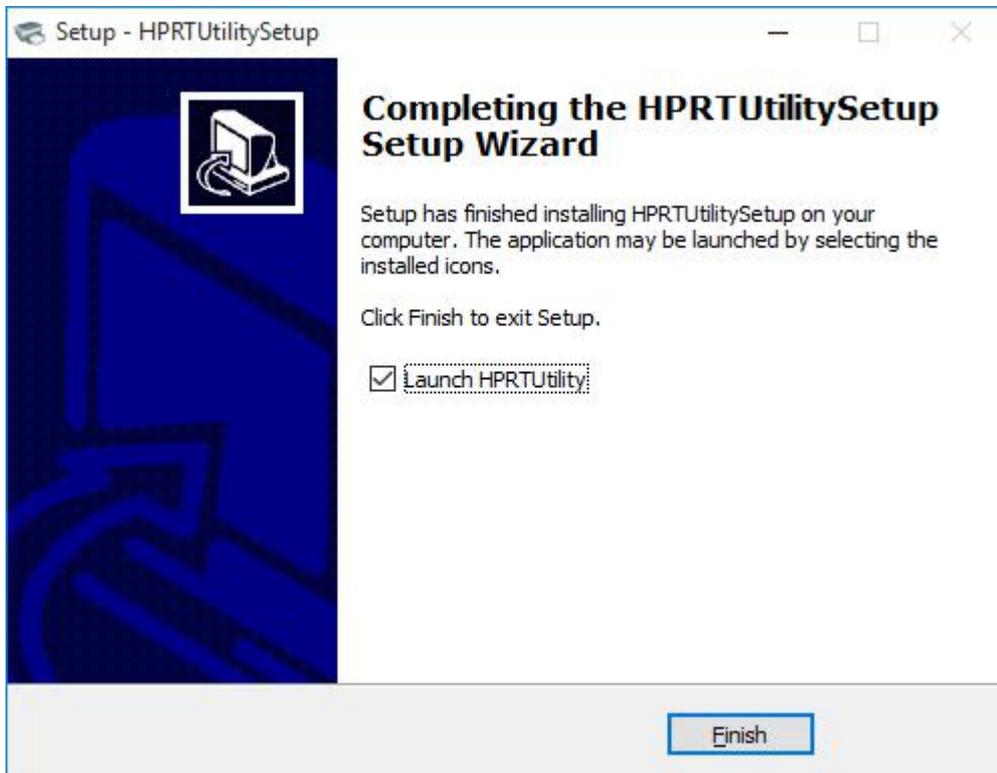


## 2.Using HPRT Utility Tool


 Warning:In different operating system,screen has slight difference.Please operate it according to the tips. Take TP805 (Windows 10) for example.

### ● Add printer

1.Click "Add Printer".

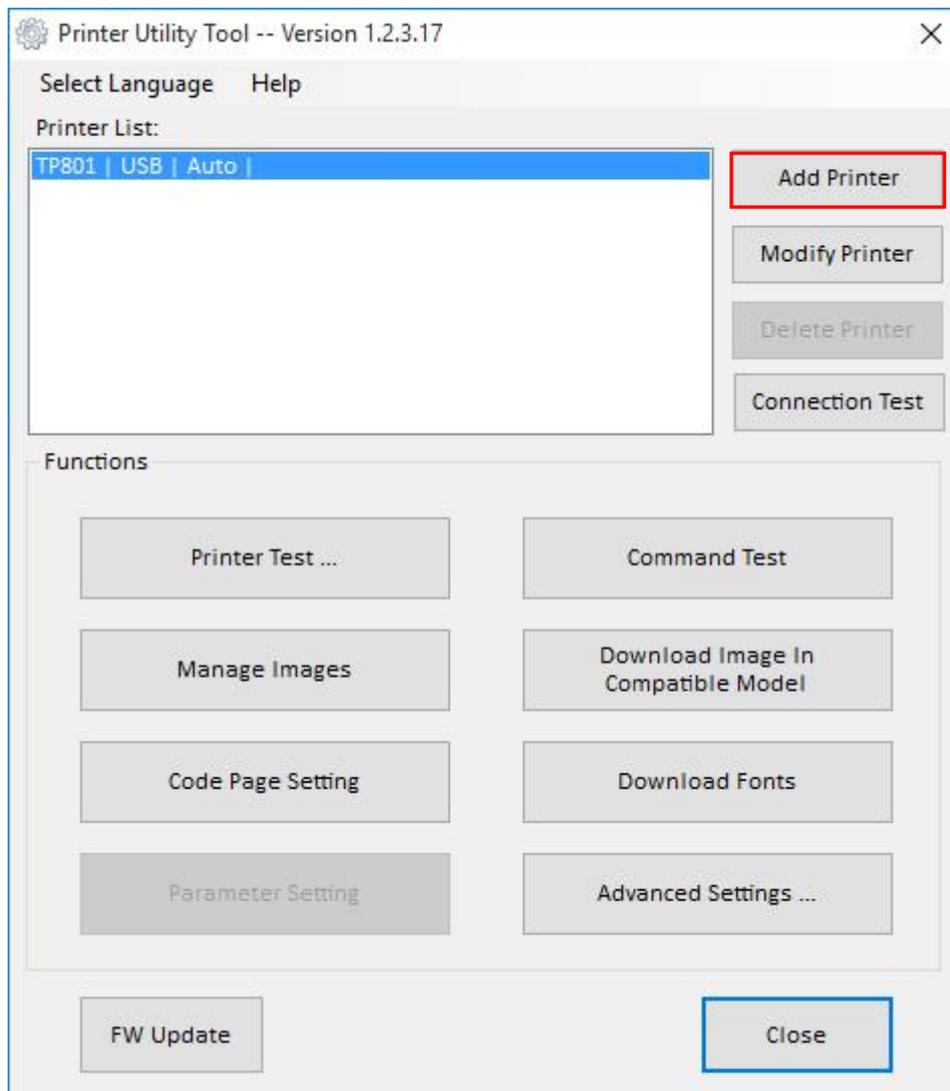


2. Choose the right printer type and port. Then click "OK". (Take TP805 for example.)

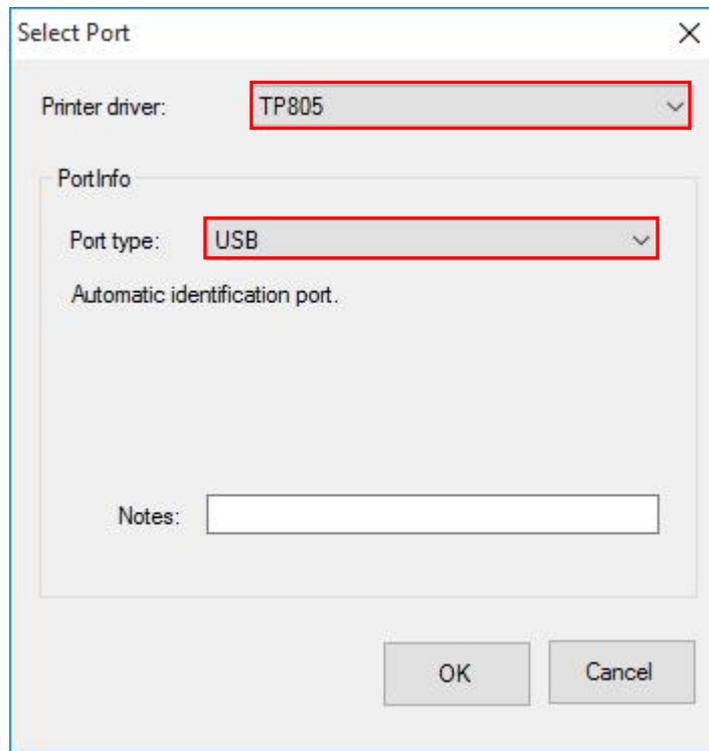


## ● Modify printer

1. Choose the printer you want to modify in the list. Click “Modify Printer”.

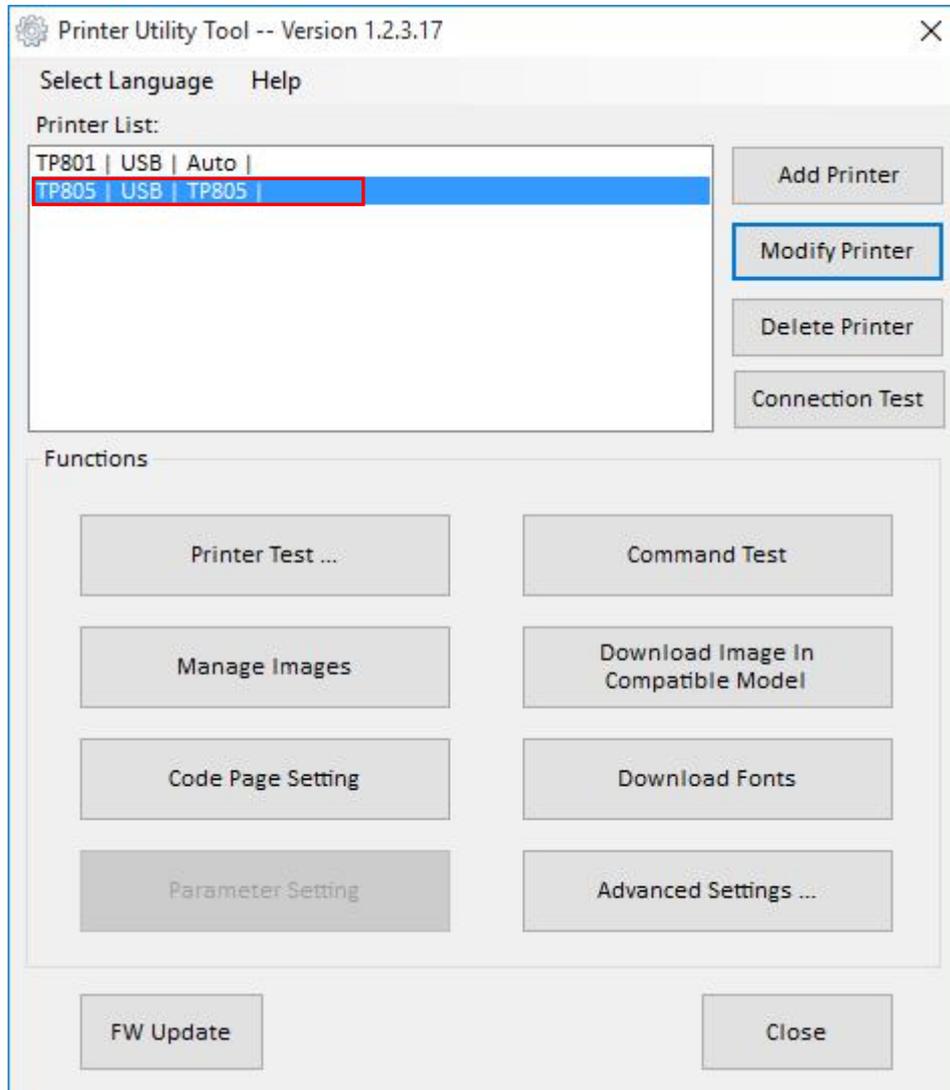


2. Choose the new printer and new port. Then click “OK”.

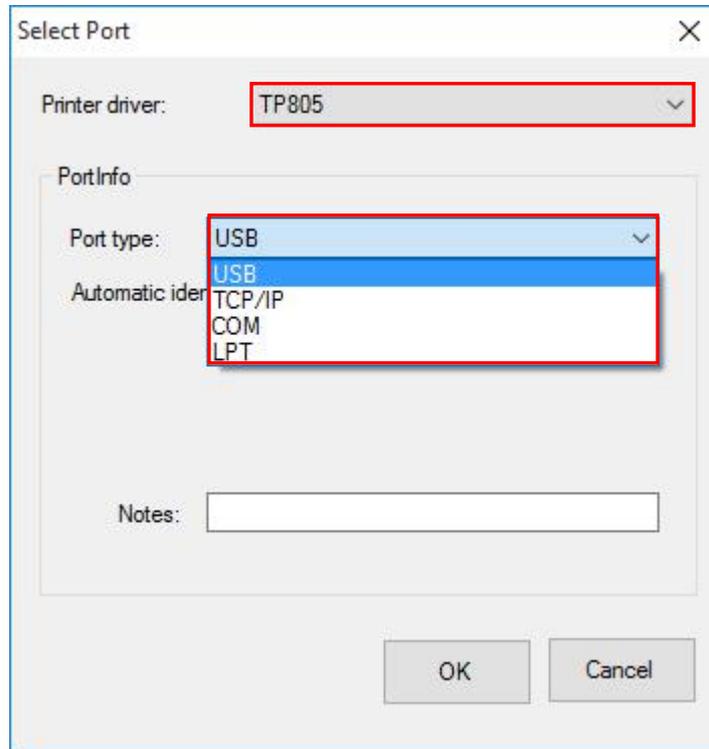

3. The new printer added successfully.

## ● Delete printer

1. Choose the printer you want to delete in the list and click “Delete Printer”.

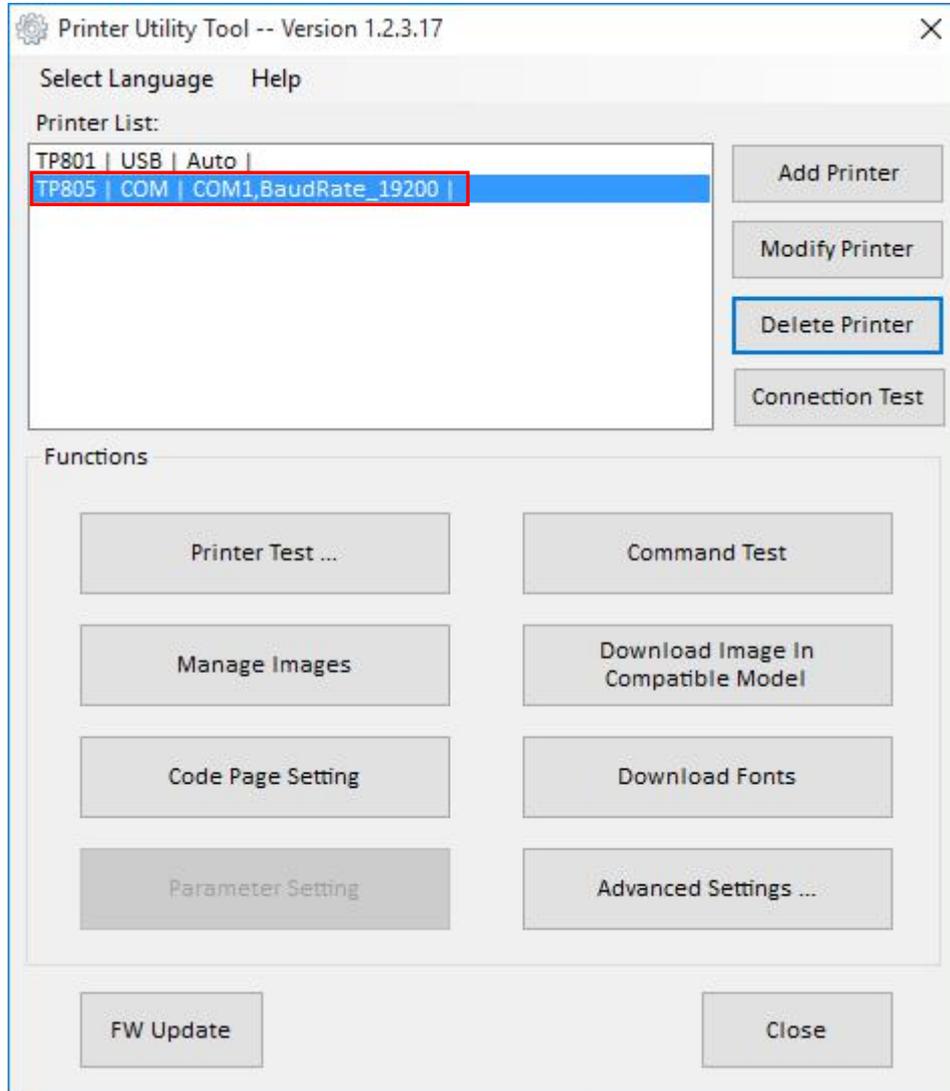


2. Click “Yes”, then the printer is deleted.




## ● Connection Test

Make sure printer is connected with computer and power on.

1. Choose the printer. Click “Connection Test”.

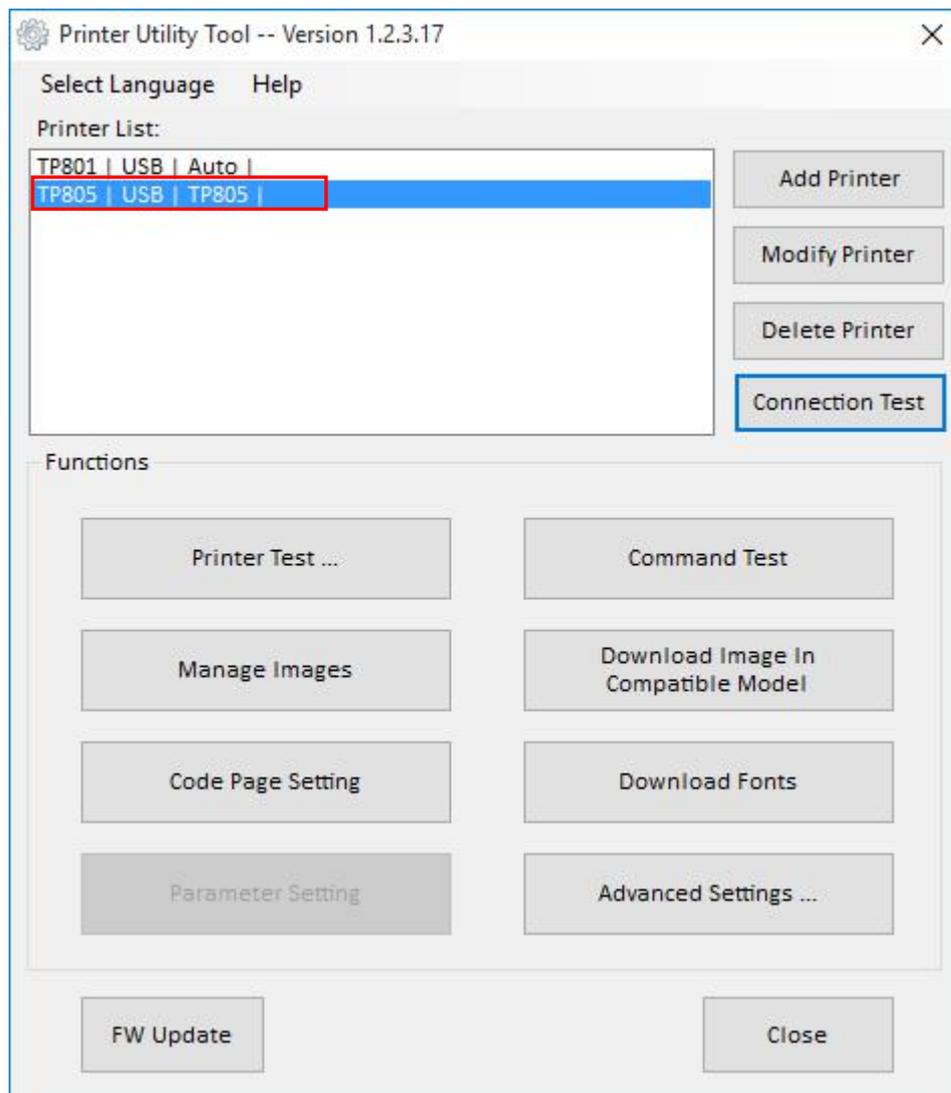

2.If the connection is successful, it will appear the following window. If the connection is unsuccessful, please connect the printer with computer.

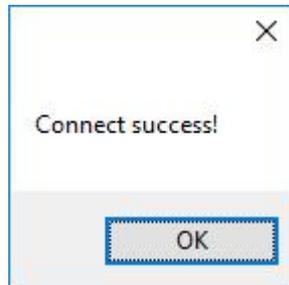


Note:

1. Make sure printer is connected with computer and power on.
2. Make sure printer is loaded paper.
3. Before using the following function, carry out the "Connection Test" first.

- **Printer Test**


Printer Test contains the below items. Click the button and printer will execute the appropriate action.

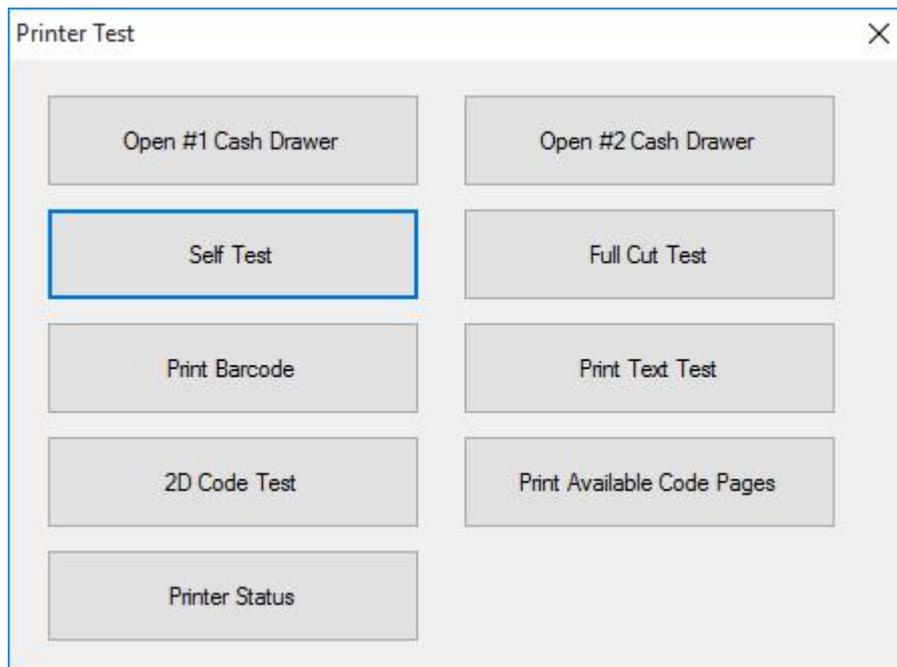

- **Command Test**


In Command Test, you can send commands to printer. Choose the Text or Hex data.

Choose a file from the existing files or input the command in the input box.

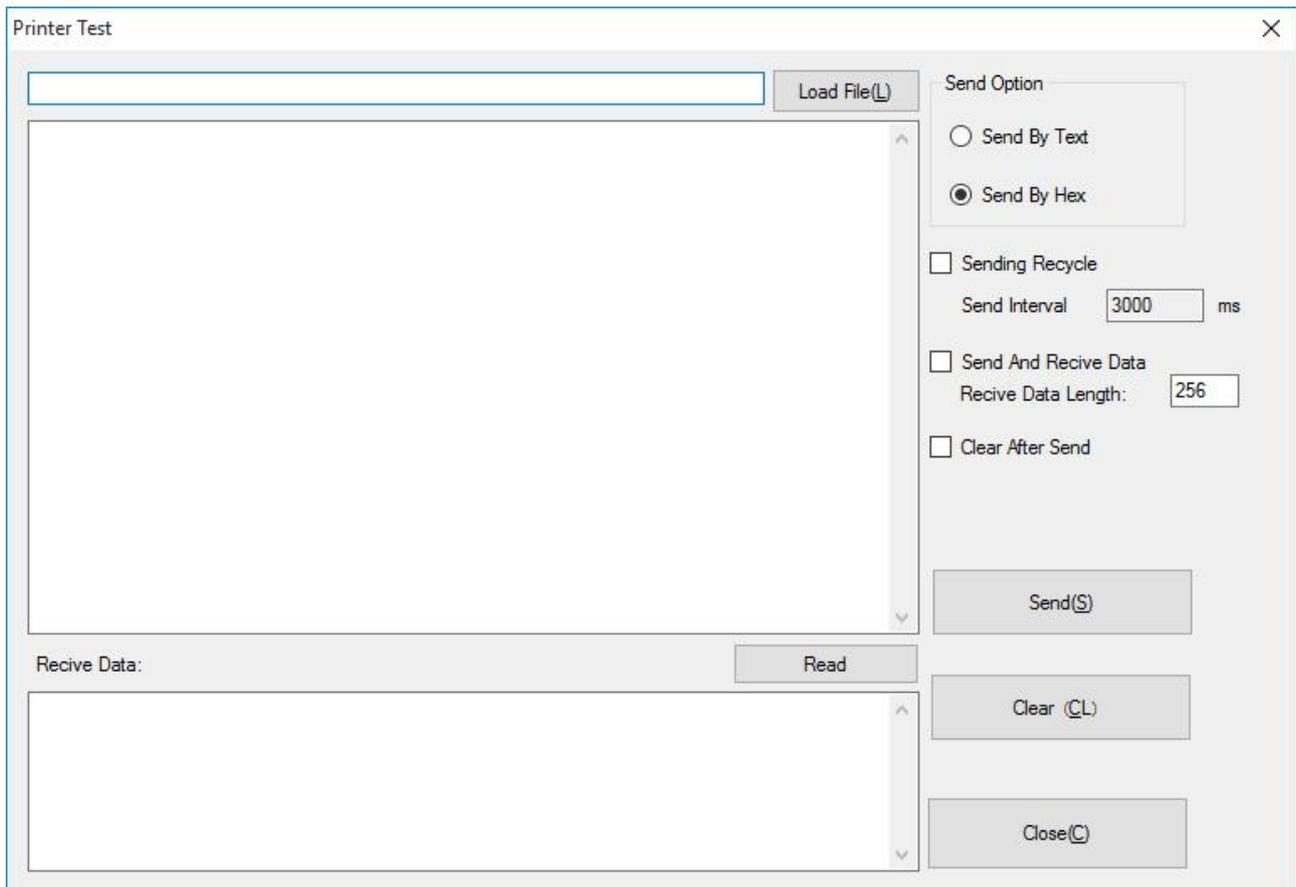


- **Manage Images**

Choose a image in image list. Click “Print” to print it or click “Delete Image”to delete it.

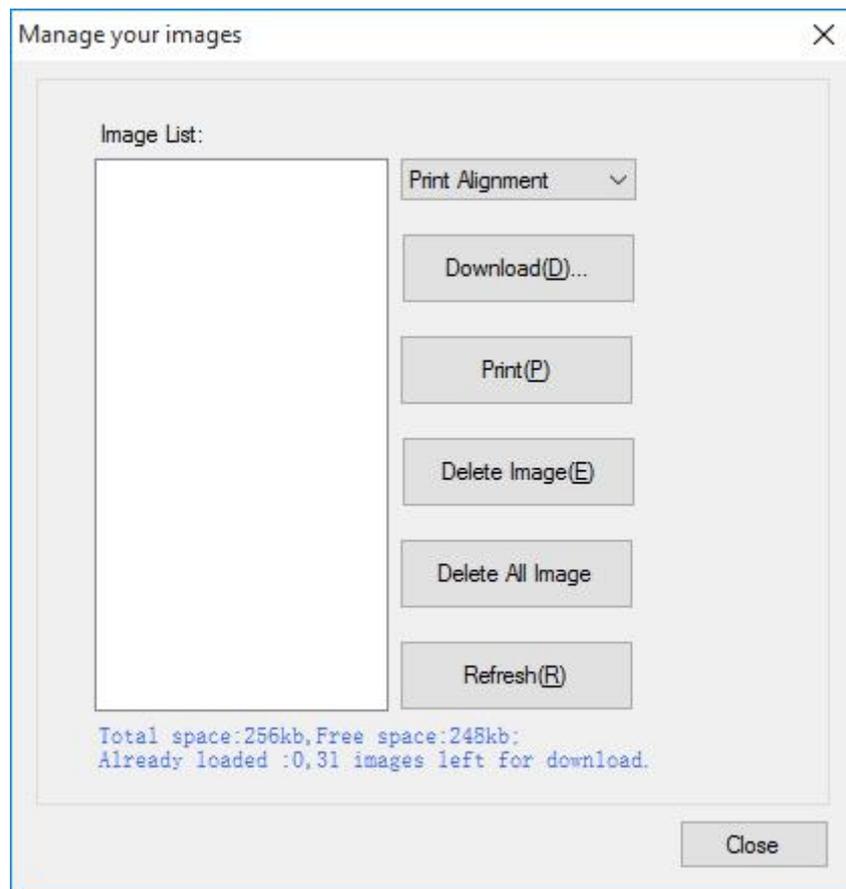

Click “Download” to download a new image into the printer.

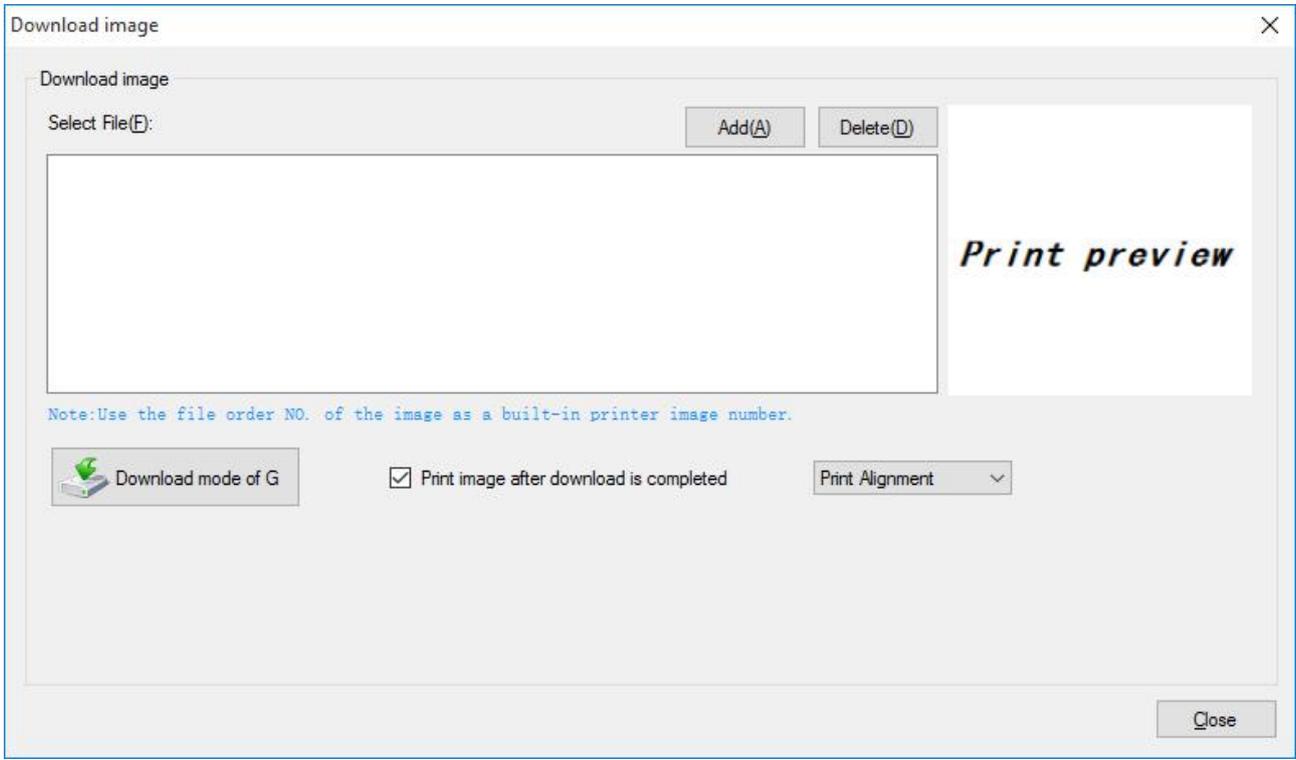

Note: The total memory is 256K. The each bitmap should be less than 40K.

## ● **Download Image In Compatible Model**

Download image in compatible model which uses old command.


## ● **Code Page Setting**

Choose the code table from the drop-down menu and click “Setting”.




## ● **Download Fonts**

Choose the font from existing files and click “Download”. If you checked “Print Sample Text After Download”, the printer will print the sample text after downloading the font.

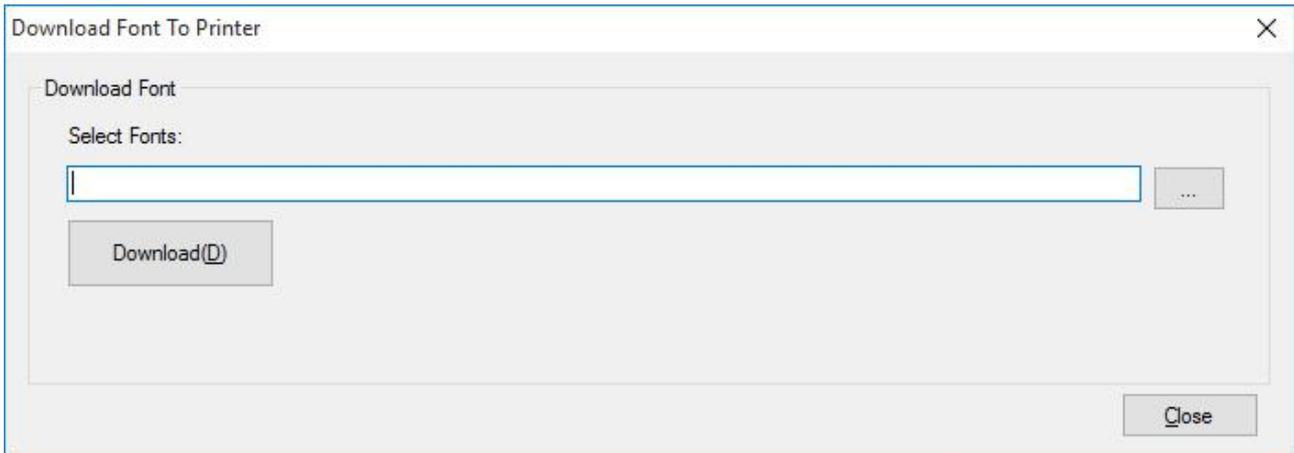


## ● **Advanced Settings**

Advanced Settings contains three items. Click the button and printer will execute the appropriate action. The change will take into effect after restarting the printer.

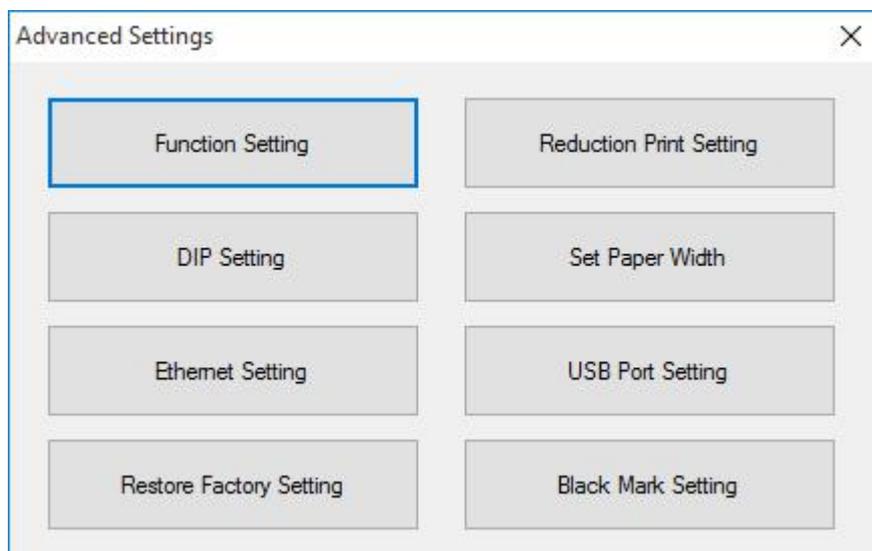

## ◆ Function Setting

Choose the item and click “Setting(S)”.

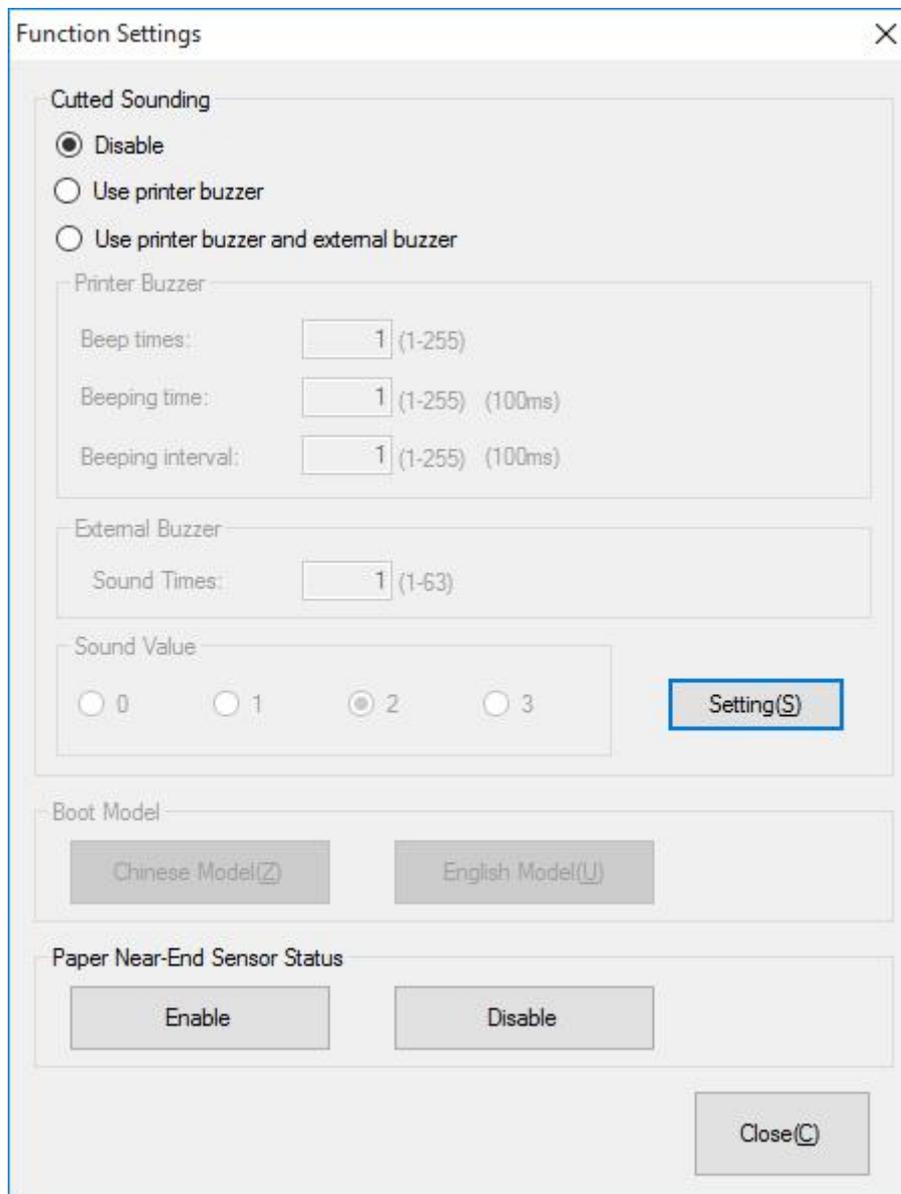


The image shows a 'Function Settings' dialog box with a close button (X) in the top right corner. It is divided into several sections:

- Cuttet Sounding**: Contains three radio buttons:  Disable,  Use printer buzzer, and  Use printer buzzer and external buzzer.
- Printer Buzzer**: A sub-section containing three input fields: 'Beep times' with value 1 (1-255), 'Beeping time' with value 1 (1-255) (100ms), and 'Beeping interval' with value 1 (1-255) (100ms).
- External Buzzer**: A sub-section containing one input field: 'Sound Times' with value 1 (1-63).
- Sound Value**: Contains four radio buttons:  0,  1,  2, and  3. A 'Setting(S)' button is located to the right of these options.
- Boot Model**: Contains two buttons: 'Chinese Model(Z)' and 'English Model(U)'. Both are currently disabled.
- Paper Near-End Sensor Status**: Contains two buttons: 'Enable' and 'Disable'. Both are currently disabled.
- A 'Close(C)' button is located at the bottom right of the dialog.


## ◆ Reduction Print Setting

Choose the item and click “Setting”.

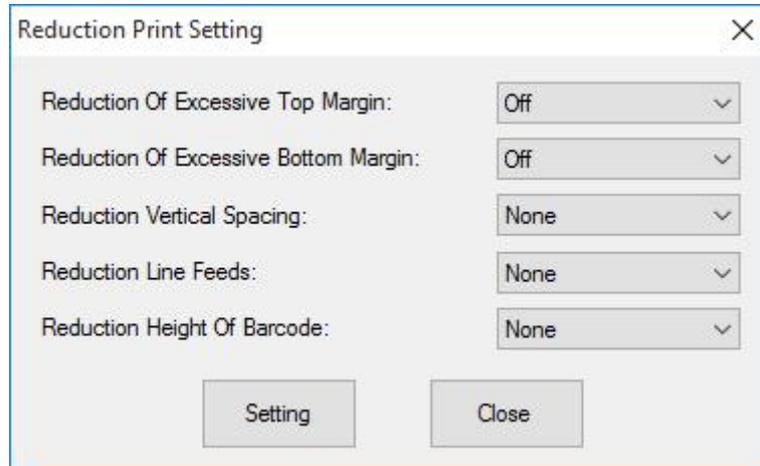

## ◆ DIP Setting


Choose the item and click “Set”.

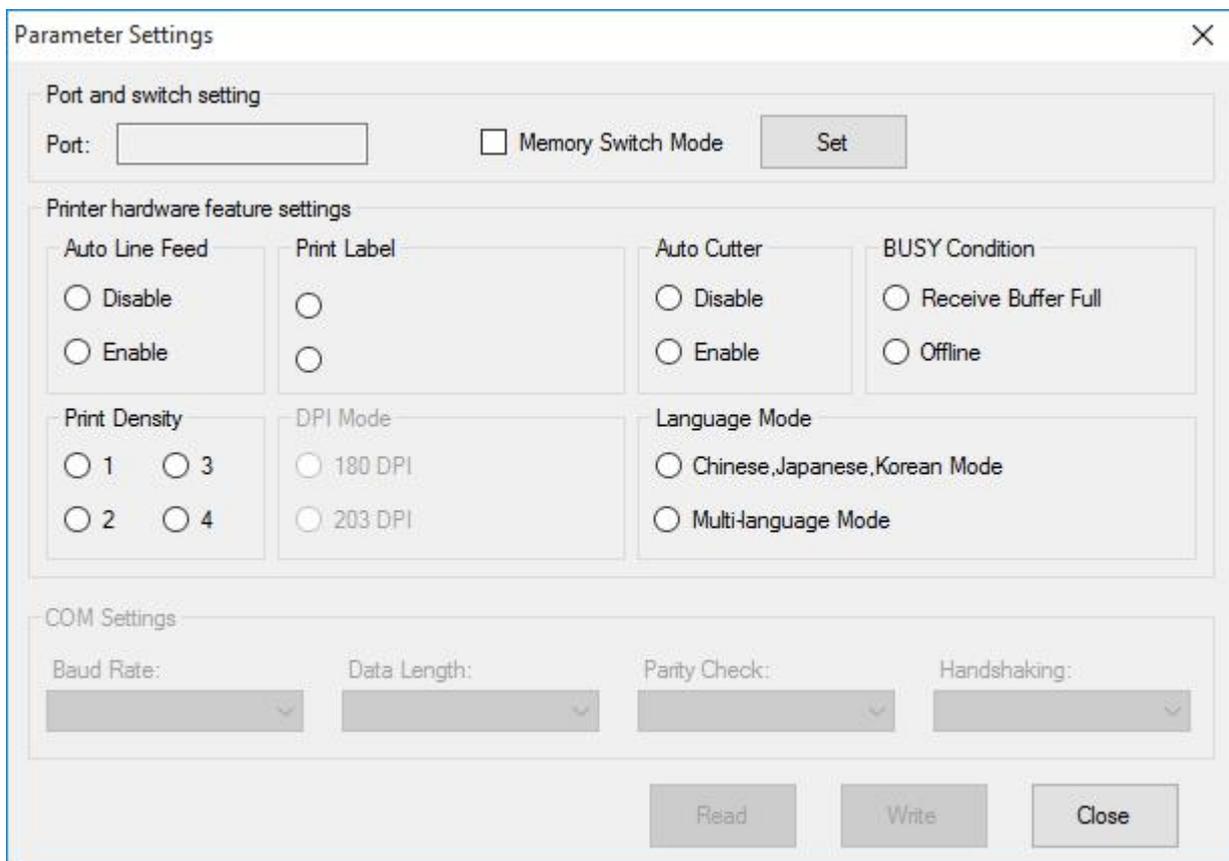

Note: When DIP setting is set in soft, the DIP switch in the bottom of printer is disable.


## ◆ Set Paper Width

Choose the item and click “Setting”.

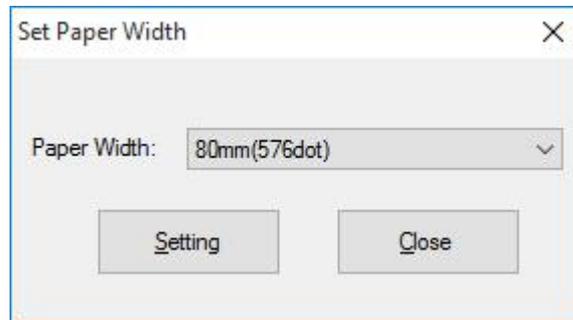


## ◆ Ethernet Setting

Choose the item and click “Set”.

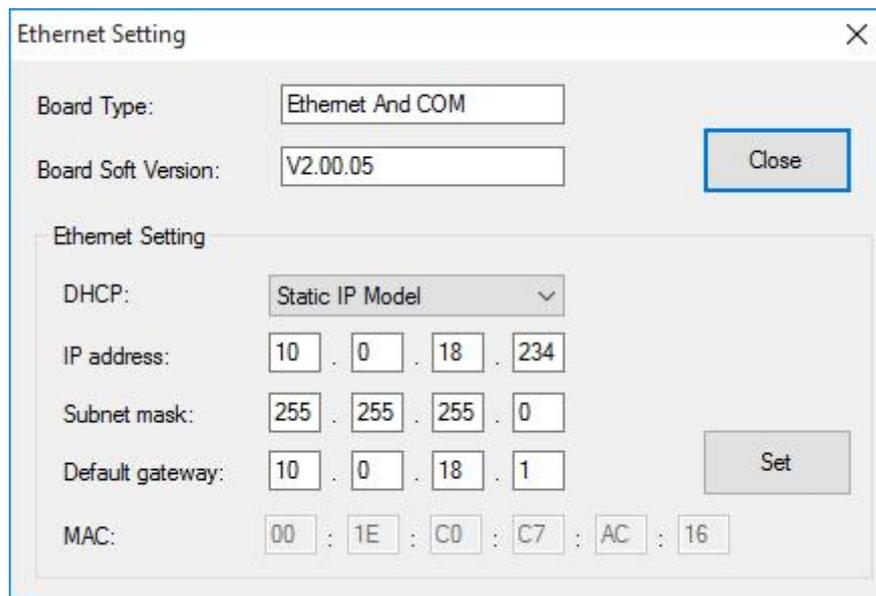

## ◆ **USB Port Setting**

Choose the item and click “Setting(S)”.

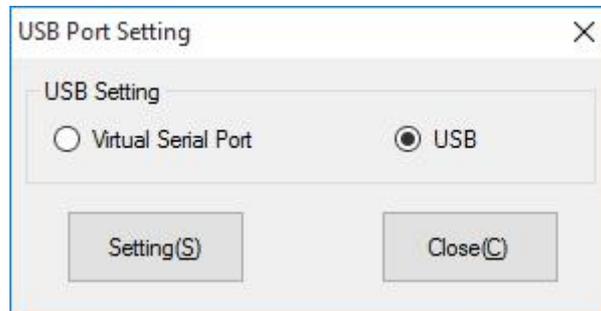

## ◆ **Restore Factory Setting**

If you want to restore factory settings, please click “Yes”, otherwise click “NO”.

